


### KIT 408 Fitting Instructions

1. With dash panel assembly removed, locate old timer relay that is glued with a foam pad to the back of the dash panel. It is a small black rectangle with 3 coloured wires, blue, yellow and red. It has a Deutsch 3-way connector.
2. Disconnect from the panel harness and discard the timer relay.
3. On the male end of the connector attached to the panel harness there are 3 white wires. Cut the wires marked W32 and W27 close to the connector.
4. Strip both ends of the 2 wires and put them into the supplied connector.
5. Now squeeze the connector to hold the wires together.

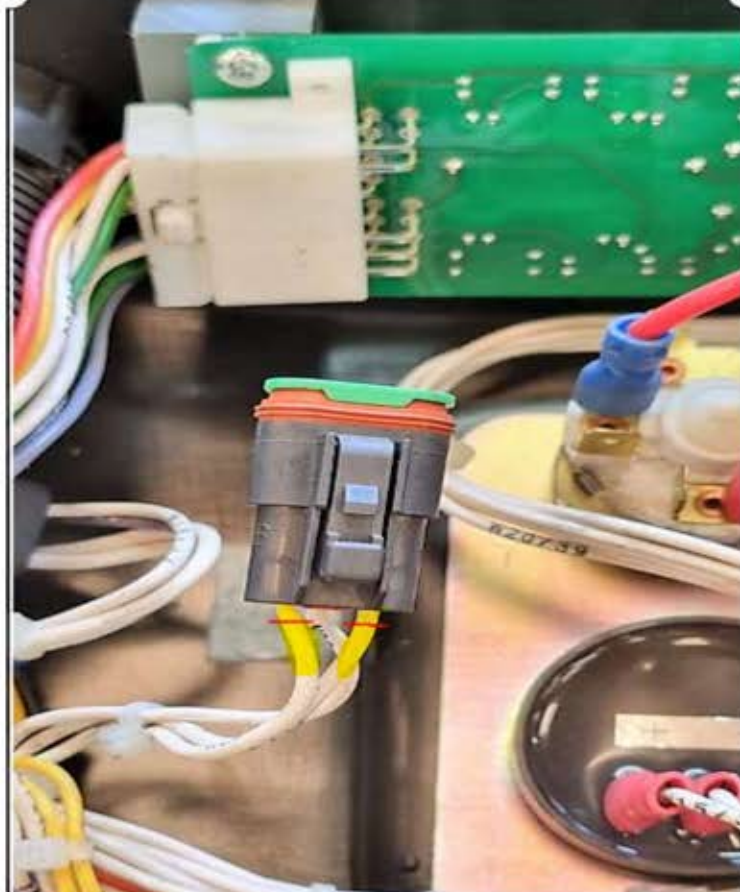

6. Once complete locate and remove black relay on the lefthand side of the dash panel assembly.



PLANT SALES & PARTS

Plant & Engineering Services Ltd  
Beare, Broadclyst  
Exeter  
Devon EX5 3JX  
Tel: 01392 882220  
Email: [office@pesplant.co.uk](mailto:office@pesplant.co.uk)  
[www.pesplant.co.uk](http://www.pesplant.co.uk)



7. Replace with the black timer relay from the kit.
8. Double check connections then re-fit dash panel assembly to complete the install.